

Manufacturer's Instructions for Use


PYTHON 1048 CHAIN CLAMP

WAX APPLICATION

USE THE SUPPLIED WAX AND APPLY DIRECTLY TO THE INSIDE OF THE CHAIN BEFORE EACH USE TO PREVENT BINDING OF THE CHAIN.

STEP 1:

PLACE PYTHON ONTO PIPE TO SET THE OPTIMAL FRONT TOOTH ANGLE USING PIN #1

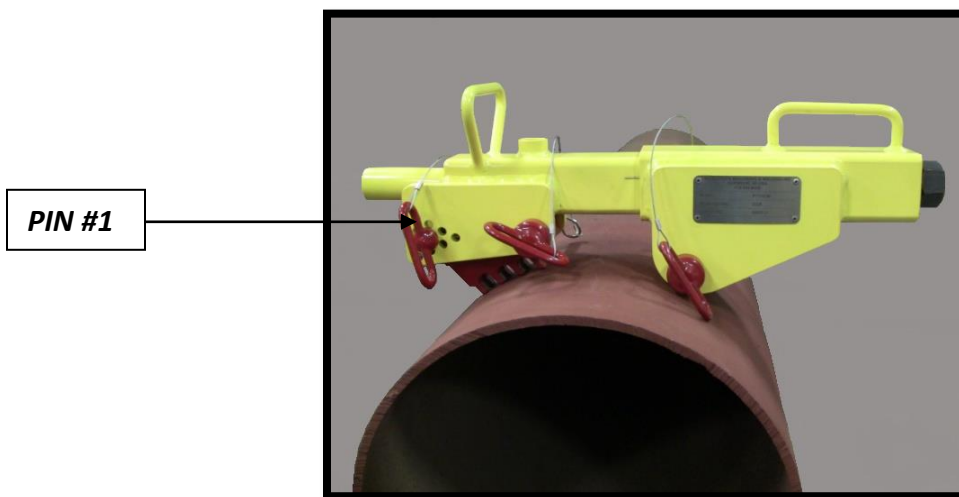


STEP 2:

WRAP CHAIN AROUND PIPE.



STEP 3:

PLACE PYTHON ONTO PIPE. INSTALL THE REAR CHAIN RETAINING PIN #2 AND CHECK FOR PROPER TOOTH ENGAGEMENT.

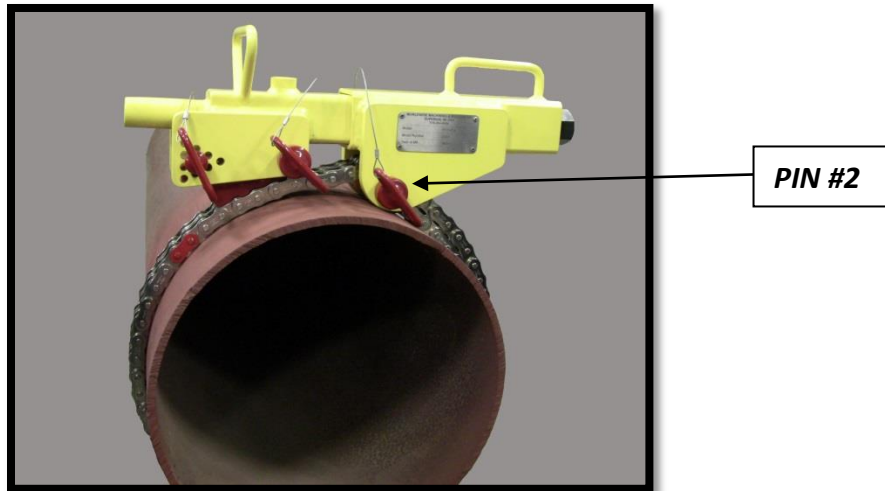

STEP 4:

USE A SOCKET AND BREAKER BAR COMBINATION, TO TIGHTEN CLAMP AS NEEDED.



WARNING:

MAXIMUM ALLOWABLE TORQUE: 750 FT LBS

DO NOT USE IMPACT GUNS WITH THE PYTHON