

## Manufacturer's Instructions for Use


# PYTHON 6-12" CHAIN CLAMP

### WAX APPLICATION

USE THE SUPPLIED WAX AND APPLY DIRECTLY TO THE INSIDE OF THE CHAIN BEFORE EACH USE TO PREVENT BINDING OF THE CHAIN.

### STEP 1:

PLACE PYTHON ONTO PIPE TO SET THE OPTIMAL FRONT TOOTH ANGLE USING PIN #1

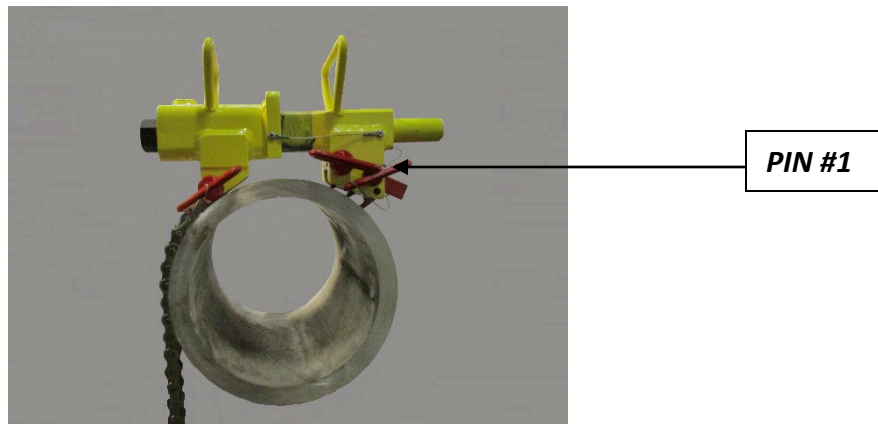


### STEP 2:

WRAP CHAIN AROUND PIPE.




**STEP 3:**

PLACE PYTHON ONTO PIPE. INSTALL THE REAR CHAIN RETAINING PIN #2 AND CHECK FOR PROPER TOOTH ENGAGEMENT.

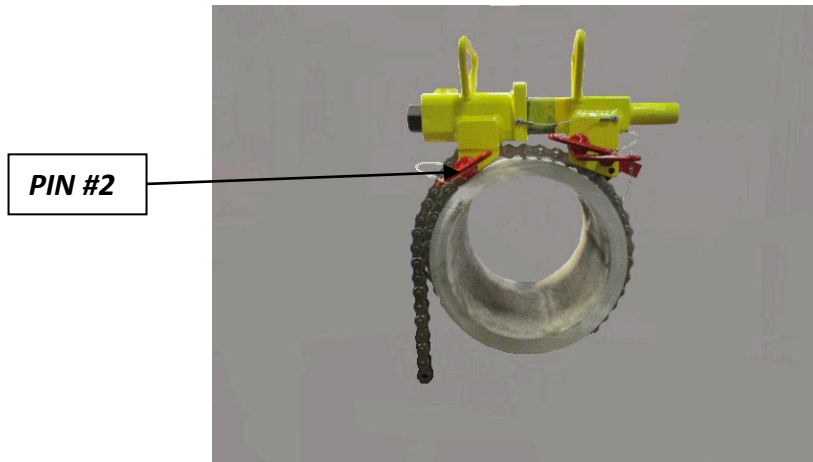

**STEP 4:**

USE A SOCKET AND BREAKER BAR COMBINATION, TO TIGHTEN CLAMP AS NEEDED.

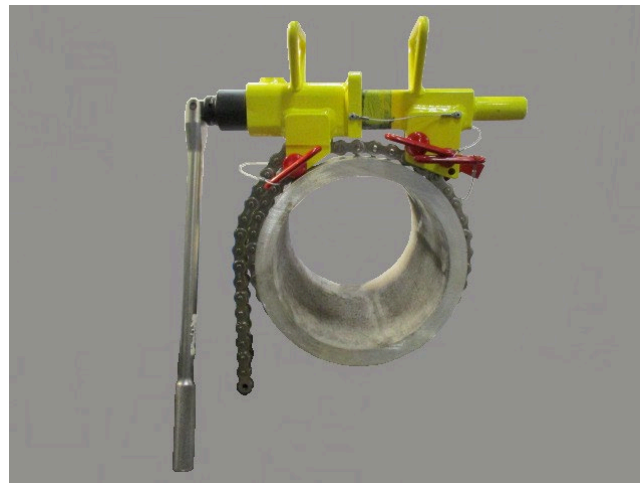

**WARNING:**

**MAXIMUM ALLOWABLE TORQUE: 350 FT LBS**